VORDICH
GREENHOUSE
SOLUTIONS

INSTRUCTION MANUAL

CAUTION: PROTECT THE DEVICE AND ITS PARTS FROM FREEZING

Working temperature: 5~40°.
Store it indoors until temperature is suitable for device.

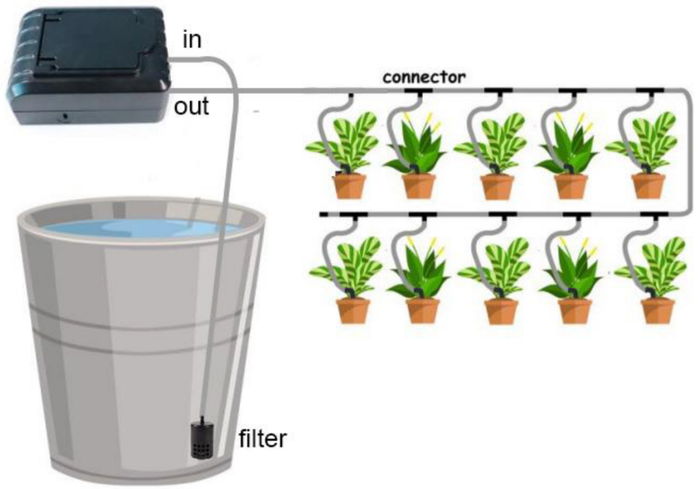

(1) Controller 1pc	(2) Adaptor 1pc	(3) Tube 20m	(4) 3-way 15pcs	(5) 4-way 3pcs
				
(6) 2-way 3pcs	(7) end 3pcs	(8) Dripper 10pcs	(9) Filter 1pc	

1. Charge input/interface: 5V / Micro usb.
2. Keep pressing “Set” button for 5 seconds to turn on or turn off the device.
3. LCD display:

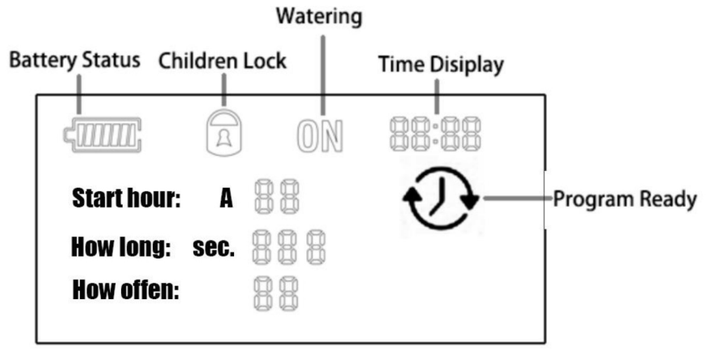

4. How to set up the automatical program:

SET button is for setting individual settings of the control panel. After pressing **SET** button, relative function will flash and it is waiting to be set. Press **SET** button again to move to the next option and set the next value.

1) + button is for adding number
2) – button is for deducting number

After setting ***Start Hour***, ***How long*** and ***How often***, Press **OK** button (or wait 10 seconds)
Then you will see , the program setting is ready.

Start hour: 01,02,03...23. [01 = 1:00, 02 = 02:00]
How long: 10,20,30,...,600. [10 = 10 seconds,20 = 20 seconds]
How often: 01,02,03...23 or D1,D2,...,D30. [01 = 1 hour, 02 = 2 hours; D1 = 1 day, D2 = 2 days]

Program example:

A. Water every morning at 8:00 for 60 seconds .
Set the *Start Hour* at 8:00, set *How long* to 60 (seconds) and *How often* to **D1**. Press **OK** button (or wait 10 seconds), the timer will begin its first program and run for 60 seconds at 8:00. The timer will now water everyday at 8:00 for 60 seconds.

B. Water every 8 hours for 40 seconds and start at 10:00.
Set the *Start Hour* at 10:00, set *How long* to 40 (seconds) and *How often* to 8. Press **OK** button (or wait 10 seconds), the timer will begin its first program and run for 40 seconds at 8:00. The timer will now water 40 seconds every 8 hours.

5. How to water manually:

Press + and ***Man*** button to water manually. Press ***Man*** button to stop watering.

6. How to set up children lock

To lock the panel, press the + and – buttons at same time. All buttons are locked. Press + and – buttons at the same time again to unlock all buttons.

TROUBLESHOOTING GUIDE:

If the water does not come on, please check the following:

1. Be sure the filter is in water.
2. Check to be sure the batteries are in good condition. If battery power is low, Please charge it.
3. Anti-siphon: put water lower than pot flowers or put the first pot flower higher than water.